

# Extractor Installation Instructions

## XR9 Series

**Clear Firearm, Making Sure it is Completely Unloaded.**


**Wear eye protection WHENEVER working on your firearm.**



Remove magazine and **clear firearm, making sure it is completely unloaded.**



Remove slide, rotating slide release lever clockwise to the nine o'clock position.

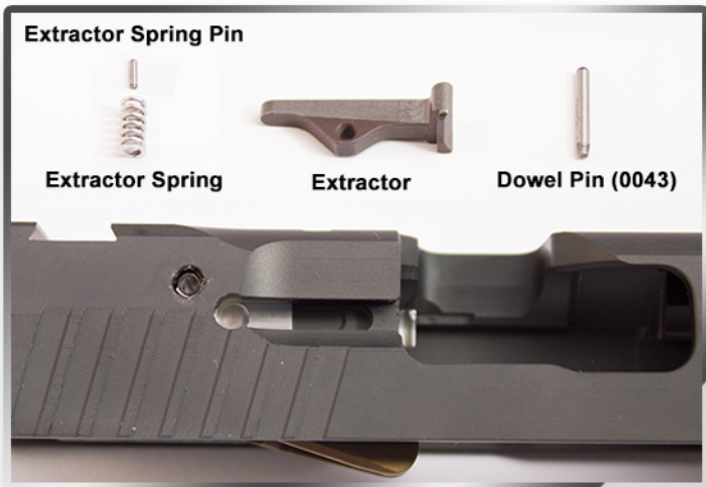

You will need the parts shown above, as well as a small amount of retaining compound (like Loctite 603) .



Place extractor spring and extractor spring pin in slide as shown.

Extractor - BA-000-0003  
Extractor Spring - BA-000-0040  
Dowel Pin - BA-000-0043


**1**

# Extractor Installation Instructions

## XR9 Series

**Clear Firearm, Making Sure it is Completely Unloaded.**

**Wear eye protection WHENEVER working on your firearm.**

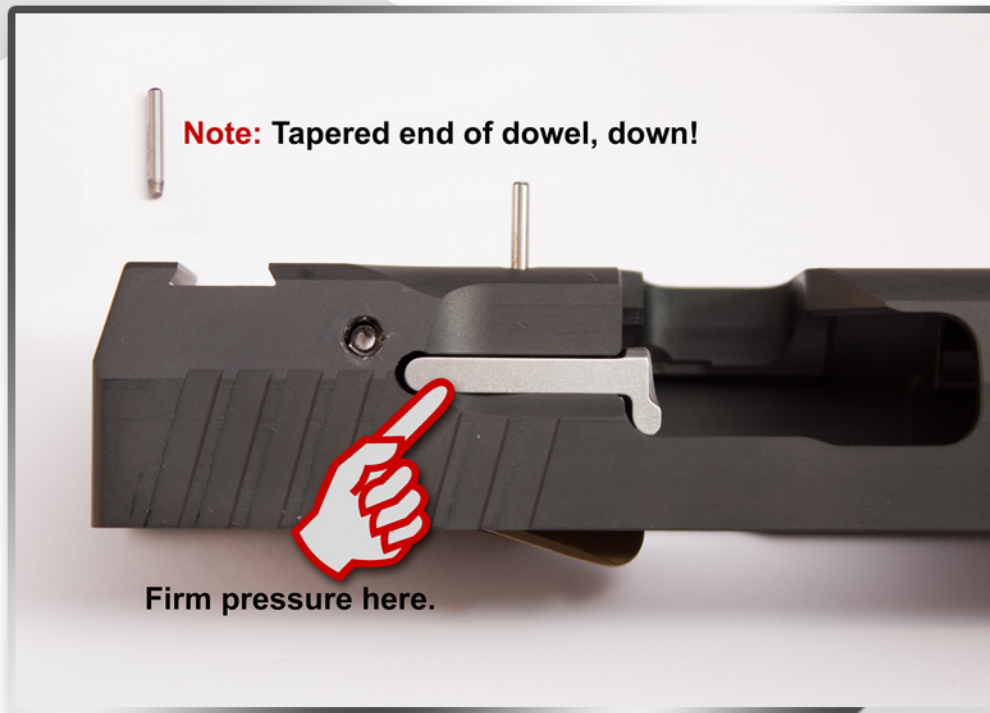

Place extractor in slot over spring. Place small amount of retaining compound on tapered end of dowel and insert into hole as shown. While applying firm pressure to area indicated, press pin into slide with a hard, non marring tool. Pin should be slightly lower than flush with surface of slide.

Replace slide/barrel assembly and **check to make sure firearm is cleared and, while firearm is pointed in a safe direction, test for function..**

**2**

# Extractor Installation Instructions

## XR9 Series

**Clear Firearm, Making Sure it is Completely Unloaded.**

**Wear eye protection WHENEVER working on your firearm.**

The staff at Boberg Arms is always happy to assist you in any way we can. Stuck somewhere in the procedure?  
Give us a call!

**Customer Service: 651-287-0617 (Mon to Fri, 9AM - 5PM CDT)**



*Boberg Arms Appreciates Your Business!*

**3**